


Power Vision Unlock License Program for Retail and Commercial Customers


Overview: The following steps are required in order for us to create an Unlock License for your Power Vision.

The Power Vision and your computer both need to have the latest updates before beginning the Unlock process. Plug the Power Vision into the computer you are going to use for this Unlock, then run the PV Update Client (*Start, Programs or All Programs, Power Vision, PV Update*). Check **each** item on the list; the *Installed Version* needs to match the *Latest Version*. If any item does not match, click on that line, and then click on *Download and Install Selected Updates* below. This will update that line item. Once all of the line items are up to date, you are ready to proceed.

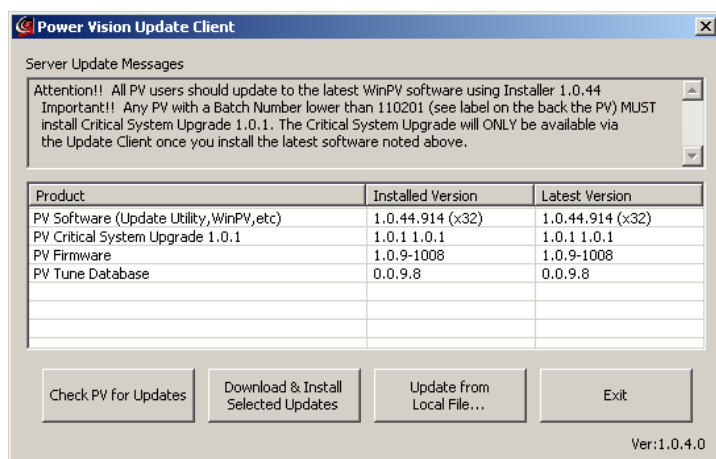

Retrieving Power Vision Information

- Information must be read and saved from the Power Vision before an Unlock License can be issued.
 1. Plug in the USB cable to the Power Vision and your computer
 2. After the Power Vision boots up and says "PC Link Mode Active"
 3. Launch WinPV on your computer
 4. On the menu bar, go to "Power Vision", and choose "PV Info"
 5. Highlight text that appears in the following dialog window:

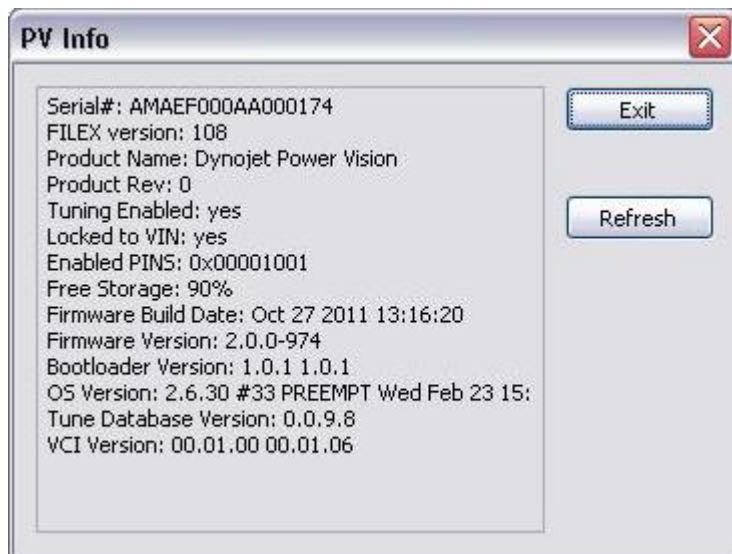

6. Once highlighted, right click and select "Copy"
7. Open a new email and paste the text you copied into the body of the email by right clicking on your mouse, and selecting "Paste".
8. Send the email to PVtech@dynojet.com along with your full name, address, phone number, and valid email address. We'll contact you for payment when the unlock license is ready.

Applying License to Power Vision

Overview: Once you've received your Unlock License, please follow these steps.

Note: The Unlock License(s) will only work for the Power Vision it was generated for!

1. Save the file that was attached to the email you received, someplace it will be easy to find like the desktop. The file may be "zipped", if so you'll need to unzip the file and save it someplace you can find it easily
2. Plug in the USB cable to the Power Vision
3. Wait till the Power Vision boots up and says "PC Link Mode Active"
4. Launch WinPV



5. On the menu bar, go to "Setup", and choose "Apply License"
6. Locate the place where you saved the Unlock License file.
7. Highlight the file, and then select Open.
8. The license has now been applied to the Power Vision and has been unlocked.
9. Unplug the Power Vision from the computer and close the WinPV software.
10. Open PV Update Client software, and plug the Power Vision back into your computer.
11. Click on PV Tune Database, and then click on Download & Install Selected Updates.
12. When this process is complete, your Power Vision is ready to be used on another bike.