



2008 YAMAHA

NYTRO

INSTALLATION INSTRUCTIONS

PARTS LIST

quantity	description
1	power commander
1	USB A to mini B cable
1	cd-rom
1	installation guide
1	power adapter
1	t-tap disconnect terminal
2	power commander decals
2	dynojet decals
2	velcro strip
1	alcohol swab
3	zip ties
1	warranty card



PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION

DOWNLOAD THE POWER COMMANDER SOFTWARE AND LATEST MAPS FROM OUR WEBSITE:
WWW.POWERCOMMANDER.COM



Figure A

WARNING

The ignition must be turned OFF before installation.

- 1 Remove the top and side body covers.
- 2 Unplug the grey 16-pin connector on the left side of the snowmobile behind the radiator.

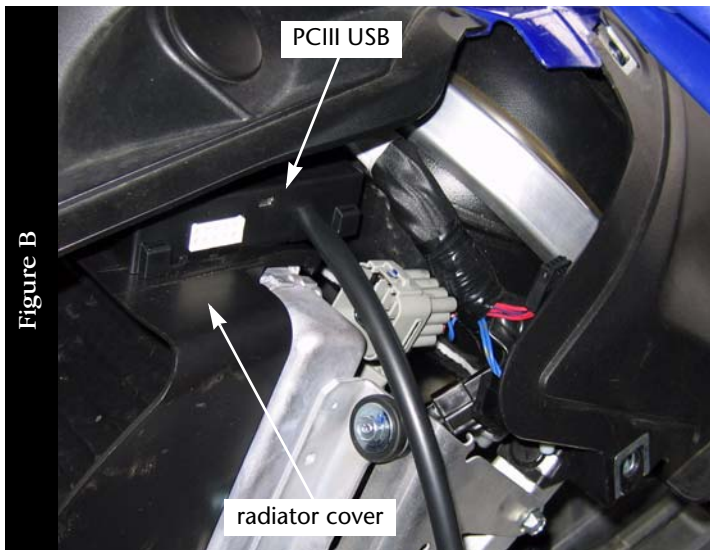


Figure B

- 3 Place the PCIII USB on top of the radiator cover.
- 4 Velcro the PCIII USB in place using the supplied velcro.

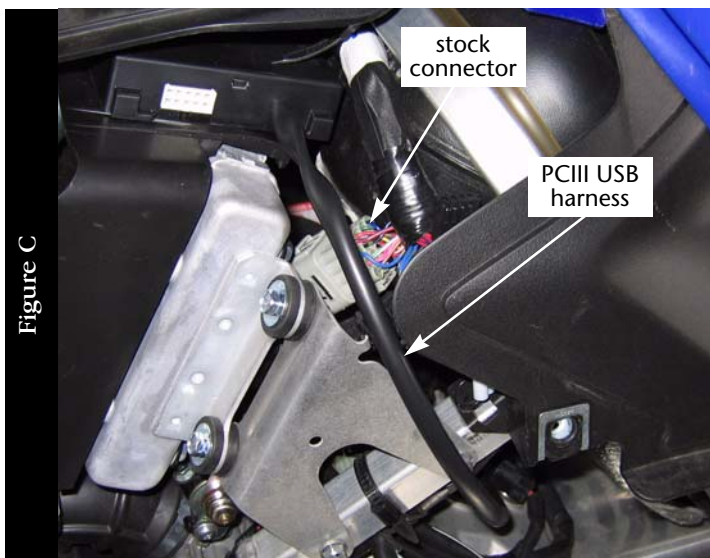


Figure C

- 5 Route the PCIII USB harness around the frame and up to the stock connectors.
- 6 Attach the PCIII USB connectors in line with the stock connectors.

Figure D



- 7 Route the ground wire to the right side of the snowmobile.
- 8 Attach the ground wire to the negative side of the battery.
- 9 Replace the side and top covers.
- 10 Insert the cd provided into your computer's cd-rom drive.
- 11 Follow the on-screen instructions to install the PCIII USB software.

Visit www.powercommander.com to download software tutorials and the latest maps.